

# Ness Medi-Alarm



Supplied with one Pendant Transmitter complete with neckchain and wristwatch strap.

## SPECIFICATIONS

### MEDI-ALARM MAIN UNIT

FRONT PANEL FUNCTIONS	HELP button, CANCEL button
FRONT PANEL INDICATORS	7 segment LED display, Mains On LED, Batt Low LED
AUDIBLE INDICATOR	Built-in beeper with various functions
MONITORING	Built-in digital dialler for optional connection to a central monitoring station
ALARMS REPORTED	Help from main unit, Help from pendant/s, Inactivity alarm, AC Fail, Low battery main unit, Low battery pendant/s, Test calls
POWER SUPPLY	9V AC Plug Pack (supplied)
BACKUP BATTERY	9V Battery (supplied)
DIMENSIONS (h x w x d)	35 x 170 x 275 mm

### MEDI-ALARM PENDANT

BATTERY (Supplied)	3V Lithium (sealed)
BATTERY SHELF LIFE (approx.)	5 years
SUPPLIED WITH	Wristwatch strap and neckchain
DIMENSIONS (h x w x d)	48 x 36 x 12 mm

### MEDI-ALARM INACTIVITY PIR

MOUNTING HEIGHT	2 – 3m wall or corner mount
COVERAGE	15m x 15m @ 90° Plus Creep Zones
RANGE SELECT	Selectable High/Low
PULSE COUNT	Selectable 1-2 or 3-4
SENSOR	Dual element pyroelectric
VISUAL DISPLAY	Red alarm LED
BATTERY (Supplied)	9V Lithium
STANDBY CURRENT DRAW	< 16µA
DIMENSIONS (h x w x d)	129 x 70 x 58 mm

### MEDI-ALARM INACTIVITY REED SWITCH

REED SWITCH	Miniature glass envelope onboard
TAMPER SWITCH	Cover removal protection
BATTERY (Supplied)	3V Lithium
STANDBY CURRENT DRAW	< 16µA
BATTERY LIFE	3 to 5 years depending on usage
DIMENSIONS (h x w x d)	34 x 87 x 23 mm

## NESS MEDI-ALARM

The Ness Medi-Alarm is a sophisticated emergency signalling product which provides peace of mind and independence for the elderly or infirm.

The Medi-Alarm has a high speed digital dialler that reports to a central station in Contact ID format.

Use with most Ness radio transmitters such as, Medi-Alarm Pendant Transmitter, Medi-Alarm Inactivity PIR, Ness Mini Radio Reed Switch or any other Ness radio device.

Supplied with plug pack, dialler, battery backup and one waterproof pendant transmitter. Additional pendant transmitters can be added at any time

## WIRELESS PENDANTS

Medi-Alarm is activated by simply pressing the button on a wireless Pendant Transmitter which can be worn on a chain around the neck, on a key ring or on the wrist using the wristwatch strap. The pendant Transmitter is rugged and fully waterproof to allow the user complete freedom of movement.

Medi-Alarm can be used with 8 Pendant Transmitters, each with a unique user ID when reporting to the monitoring station. The Pendants Transmitters use a long life Lithium battery for many years of reliable service.


## INACTIVITY MONITOR

The Inactivity Monitor is a powerful feature commonly used by people living alone. Wireless PIRs or Wireless Reed Switches are used to monitor the user's normal movement through the house. If movement ceases for a pre-programmed interval, Medi-Alarm will sound a warning and then dial the monitoring station.

## PILL REMINDER

Medi-Alarm can be programmed to remind the user to take medication at preset intervals, up to 255 hours.

100-105	Ness Medi-Alarm
100-683	Optional extra Pendant Transmitter
100-663	Optional Radio PIR
100-662	Optional Radio Reed Switch
450-125	Optional Mode 3 ph lead with piggyback plug
895-029	Medi-Alarm replacement wristwatch strap
895-022	Medi-Alarm replacement chain for pendant

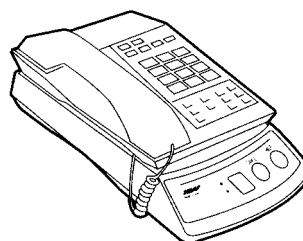

NESS SECURITY PRODUCTS  
Australian Communications Authority  
ELECTROMAGNETIC COMPATIBILITY COMPLIANCE

**SYDNEY** 02 8825 9222 sales@ness.com.au  
**MELBOURNE** 03 9875 6400 nessmelb@ness.com.au  
**BRISBANE** 07 3399 4910 nessbris@ness.com.au  
**PERTH** 08 9328 2511 nessper@ness.com.au  
**ADELAIDE** 08 8152 0000 adelaide@ness.com.au  
**NFS (NZ)** 09 580 1576 sales@nfs.co.nz



www.ness.com.au